

## GOTECH "the best partner" to raise your competition

### GT-7218-A 膠帶初黏性滾球試驗機


#### TAPE INITIAL ADHESION ROLLING BALL TESTER

CNS-11888, GB/T 4852

將試片之黏貼面朝上，置于傾斜30度之試驗板上，兩端分別以膠帶及砝碼固定，然後取鋼球從最大號者，依序使之由傾斜板上自由滾下，記錄能黏在試片上達5秒以上之球號。

Turn the adhesive surface of specimen upward and place it onto the test plate inclined at 30°. Then, fix its two ends with tape and weight respectively. Release freely the steel balls from large one down to small one in sequence on the top end of testing plate. Record the number of steel ball which can stay on the tape for at least 5 seconds.

可試片數 Testing Specimen	4片(PCS)
體積 Dimension (WxDxH)	58×39×33cm
重量 Weight	17 kg

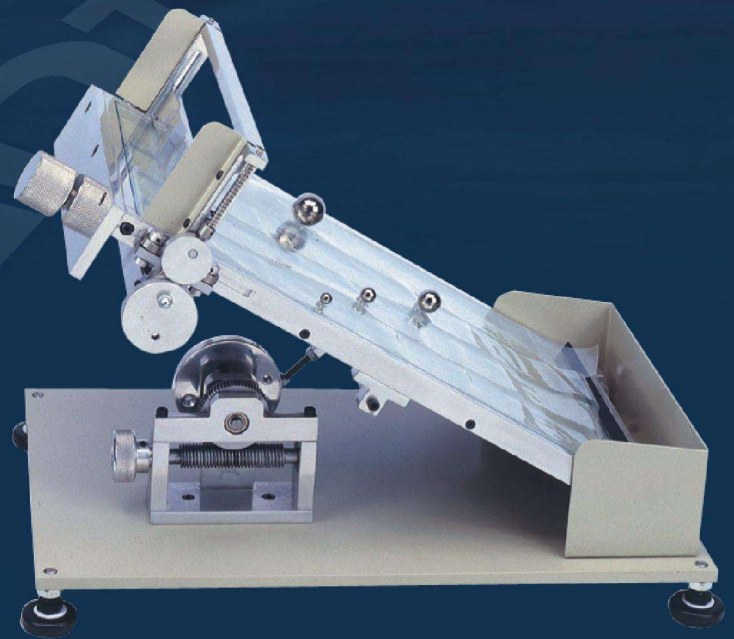

了解更多產品信息，請登錄我司網站 [www.gotech.biz](http://www.gotech.biz)